



Consumer Response Group

6500 W. Cortland Street * Chicago, IL 60707 * Phone: 773-889-8870 * FAX: 773-622-2269

July 9, 2008

Page 1 of 3

TECHNICAL SERVICE BULLETIN

10062

MODEL(S): 150 GTL DX

DESCRIPTION: How to increase the talk-back volume.

ACTION: To increase the talk-back volume, reduce the value of R43. The standard value of R43 is 47K ohm.

The location of R43 is shown on pages 2 and 3.

ADJUSTMENTS: None

NOTES: If the talk-back volume is turned too high, acoustic feedback can occur which will cause a squealing noise. The solution is to turn down the talk-back volume.



