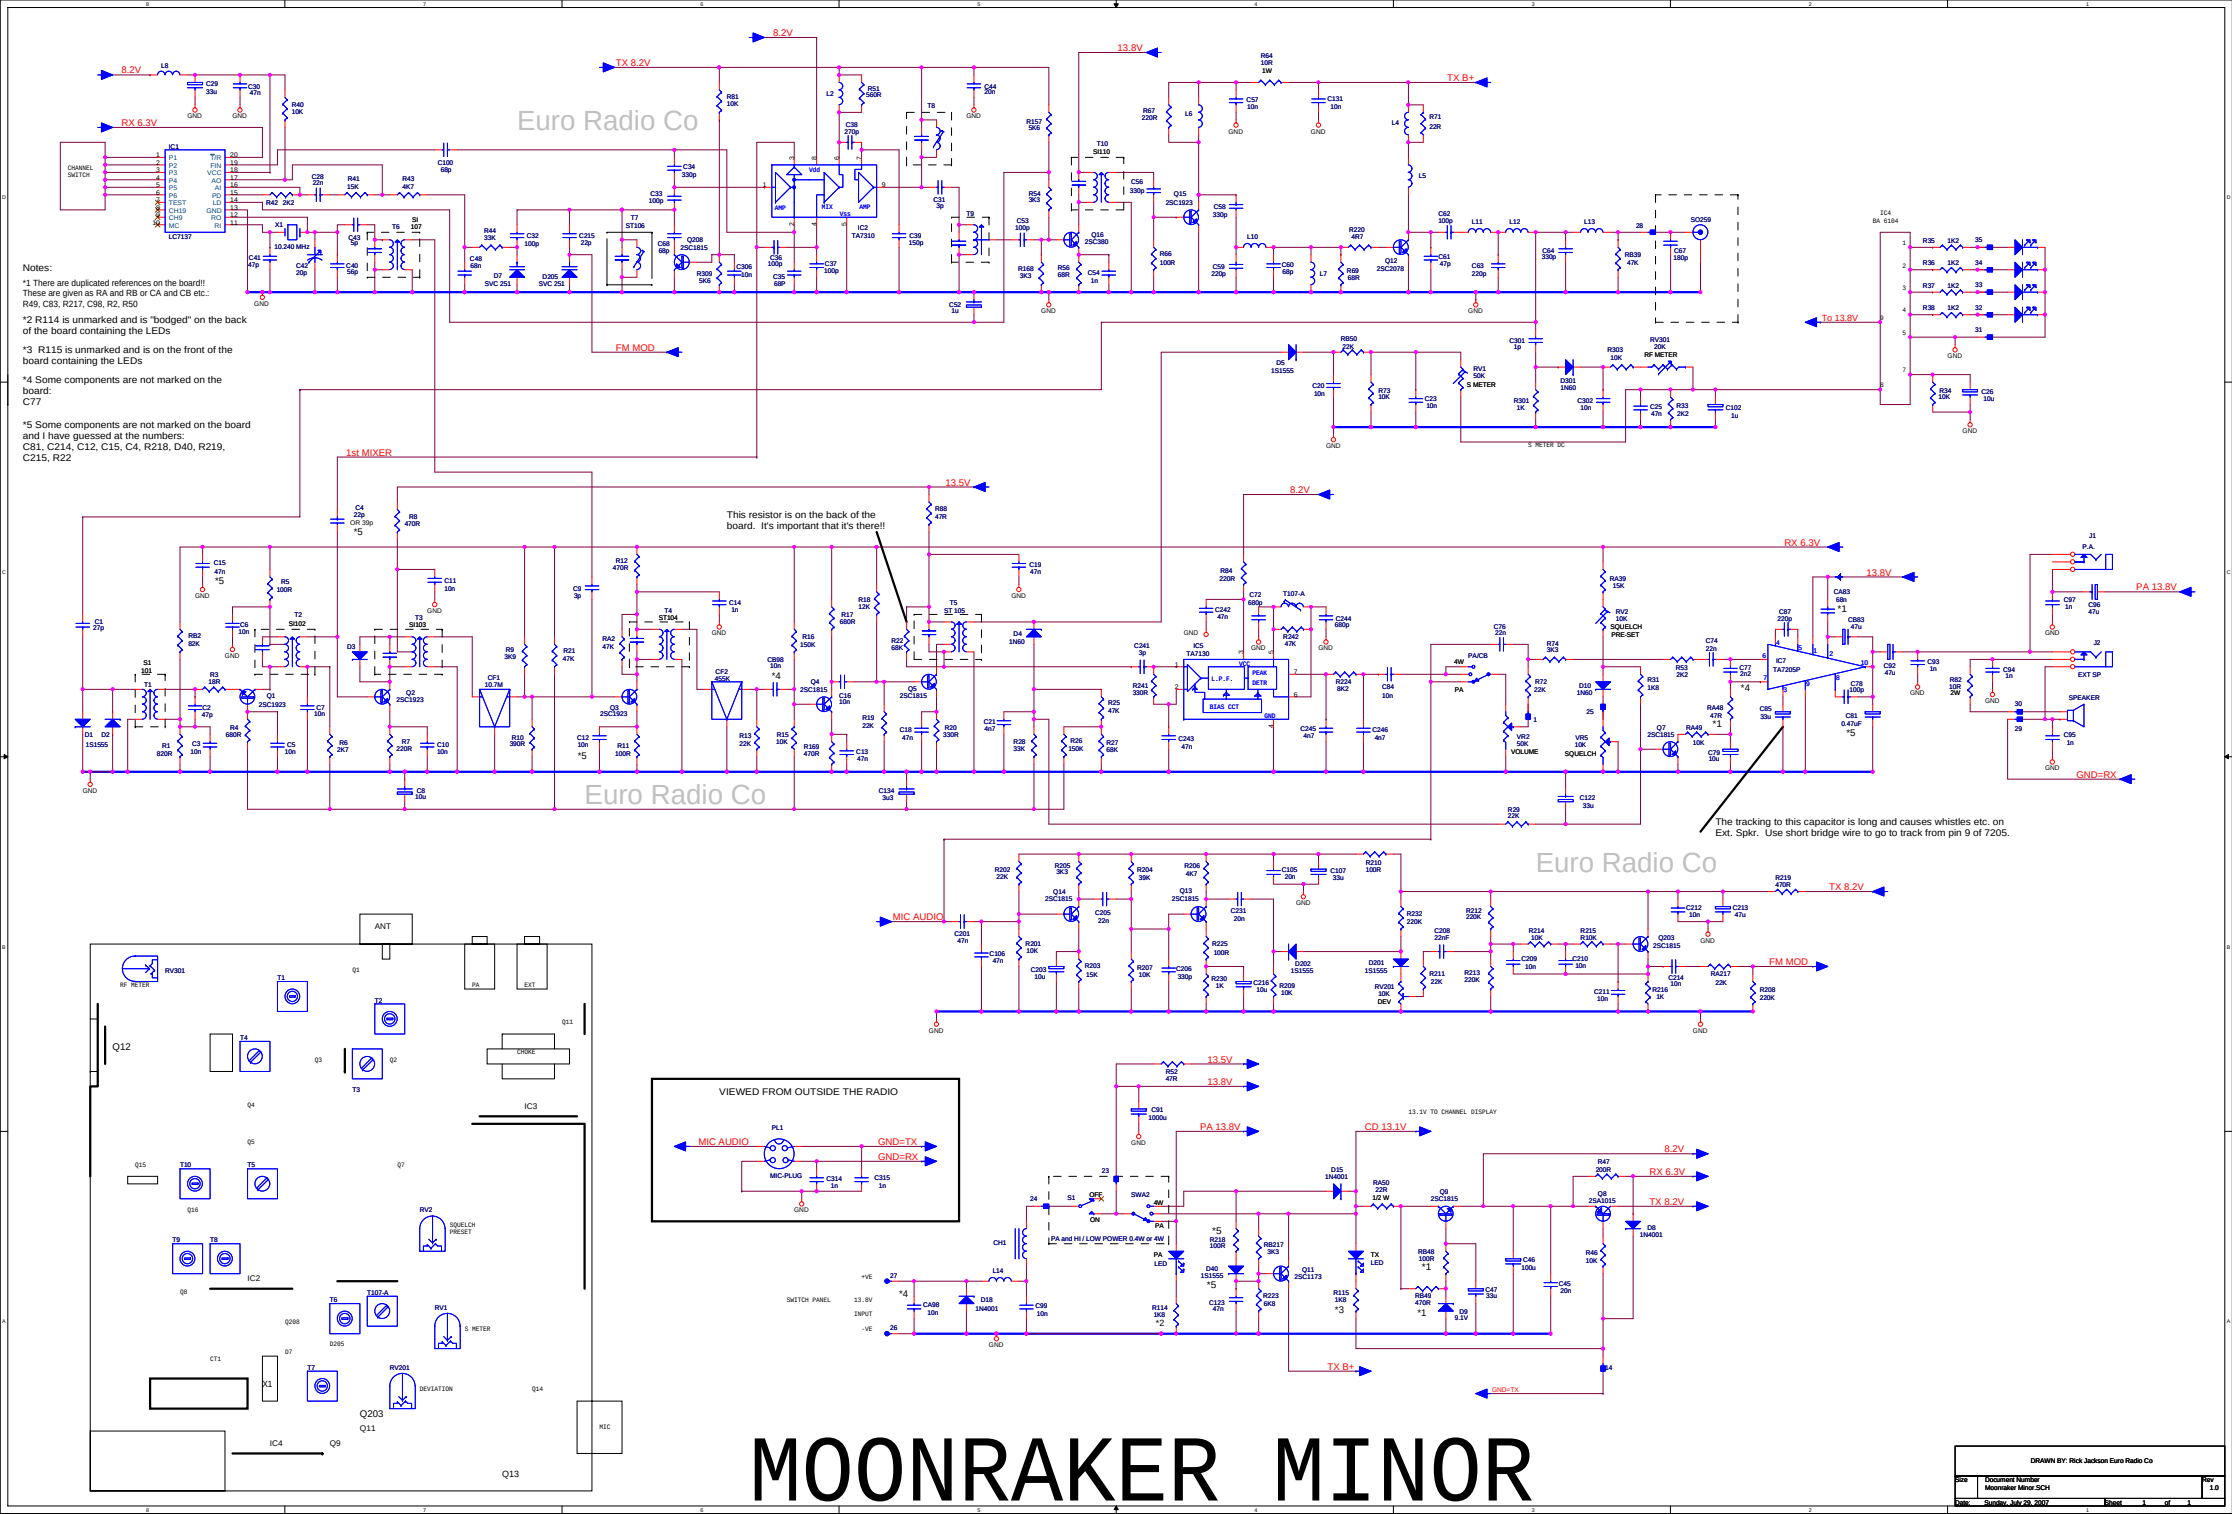
Euro Radio Co
Notes:
*1 There are duplicated references on the board!!
These are given as RA and RB or CA and CB etc.:
R49, C83, R217, C98, R2, R50
*2 R114 is unmarked and is "bodged" on the back of the board containing the LEDs
*3 R115 is unmarked and is on the front of the board containing the LEDs
*4 Some components are not marked on the board:
C77
*5 Some components are not marked on the board and I have guessed at the numbers:
C81, C214, C12, C15, C4, R218, D40, R219, C215, R22
This resistor is on the back of the board. It's important that it's there!!
The tracking to this capacitor is long and causes whistles etc. on Ext. Spkr. Use short bridge wire to go to track from pin 9 of 7205.
VIEWED FROM OUTSIDE THE RADIO
MIC AUDIO
GND=TX
GND=RX
MIC-PLUG
MOONRAKER MINOR
DRAWN BY: Rick Jackson Euro Radio Co
Document Number
Moonraker Minor.SCH
Rev 1.0
Date: Sunday, July 29, 2007
Sheet 1 of 1